


Bohrschablone für die Montage von
advanSecure® Wand- und Bodenanker (Art. Nr. AS0302011)
Drilling template for mounting
advanSecure® Wall and Ground Anchor (Art. No. AS0302011)

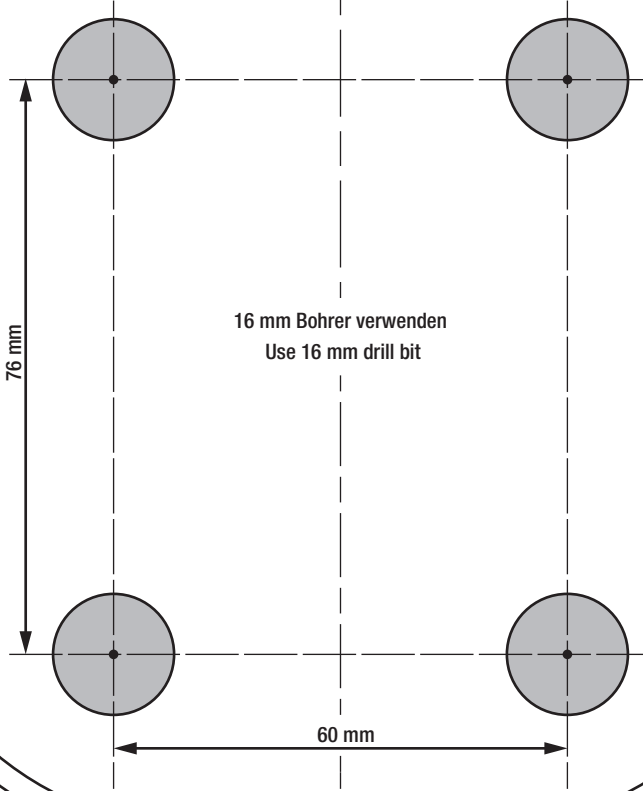

16 mm Bohrer verwenden
Use 16 mm drill bit

76 mm

60 mm

130 mm

147 mm

